



# FOX EOS 10000FD

No	Parts Name
1	FRONT DRAG KNOB
2	EOS 10000 FD SPOOL
3	SPOOL WASHER
4	CLICKER PLATE
5	CLICKER WASHER
6	ROTOR NUT
7	ROTOR INSERT
8	ROTOR NUT RETAINER SCREW
9	BAIL ARM WIRE
10	LEFT SIDE PIVOT PIN
11	LEFT SIDE BAIL ARM HOLDER
12	BAIL ARM PLATE
13	PIVOT SCREW
14	PIVOT SCREW COVER LEFT
15	ROLLER WHEEL SCREW
16	ROLLER WHEEL PIVOT ARM
17	BAIL ARM HOLDER
18	ROLLER WHEEL WASHER 1
19	ROLLER WHEEL
20	ROLLER WHEEL BEARING

No	Parts Name
21	ROLLER WHEEL WASHER 2
22	PIVOT ARM BUSH
23	RIGHT SIDE PIVOT SCREW
24	PIVOT SCREW COVER RIGHT
25	ROTOR SIDE COVER SCREWS
26	ROTOR SIDE COVER
27	RETURN ARM
28	RETURN SPRING ACTUATOR
29	RETURN SPRING
30	RETURN SPRING ARM
31	EOS 10000 FD ROTOR
32	MAIN OSCILLATING SHAFT
33	ROTOR WASHER
34	BEARING PLATE
35	BEARING PLATE SCREWS
36	PINION BEARING
37	BEARING HOLDER
38	BEARING RETURN SPRING
39	ON-WAY BEARING
40	PINION GEAR

No	Parts Name
41	WORM RETAINER SCREW
42	WORM RETAINER PLATE 1
43	WORM BEARING WASHER
44	WORM BEARING 1
45	WORM SHAFT DRIVE GEAR
46	WORM SHAFT
47	ANTI REVERSE LINKAGE
48	LINKAGE SPRING
49	ANTI REVERSE SWITCH
50	SWITCH RETAINING SCREW
51	OSCILLATION BLOCK
52	OSCILLATION BLOCK SCREW
53	OSCILLATION TOOTH
54	OSCILLATION TOOTH BUSH
55	OSCILLATION TOOTH WASHER
56	OSCILLATION BLOCK PLATE
57	BLOCK PLATE SCREW
58	HANDLE CAP
59	HANDLE CAP WASHER
60	SIDE COVER - COVER PLATE

No	Parts Name
61	SIDE COVER SCREW CAP 1
62	SIDE COVER SCREW CAP 2
63	SIDE COVER LOWER SCREW
64	SIDE COVER SCREWS
65	EOS 10000 FD SIDE COVER
66	HANDLE SHAFT BEARING 1
67	FACE GEAR WASHER
68	FACE GEAR
69	HANDLE SHAFT BEARING 2
70	WORM BEARING 2
71	WORM BUSHING
72	REAR RETAINING PLATE
73	RETAINING PLATE SCREW
74	EOS 10000 FD BODY
75	GUIDE PLATE
76	GUIDE SHAFTS
77	EOS 10000 FD REAR COVER
78	REAR COVER SCREW
79	BODY SIDE PLATE
80	EOS 10000 FD HANDLE