



5:1
GEAR RATIO



No	Parts Name
1	Aquos 4000 Rotor
2	Rotor Washer
3	Rotor Nut
4	Nut Retainer Screw
5	Bail Arm Circlip
6	Bail Arm Pivot
7	Return Arm
8	Spring Arm
9	Spring Actuator
10	Return Spring
11	Rotor Cover
12	Rotor Cover Screws
13	Bail Arm Assembly
14	Bail Arm Circlip
15	Roller Washer
16	Roller Bearing
17	Line Roller
18	Roller Spacer
19	Roller Cap
20	Line Roller Screw
21	Drag Knob
22	Retainer Clip
23	Stainless Drag Washer
24	Winged Drag Washer
25	Drag Washer
26	Aquos 4000 Spool
27	Retaining Washer
28	Clicker Gear
29	Spacer Washer
30	Oscillating Shaft
31	Bearing Cover
32	Bearing Cover Screws
33	Rotor Bearing
34	Bearing Housing
35	One Way Bearing
36	One Way Bearing Spring
37	Pinion Gear
38	Retaining Screw
39	Worm Shaft Plate
40	Worm Shaft Washer
41	Worm Shaft Bearing
42	Worm Shaft Bushing
43	Worm Shaft Gear
44	Worm Shaft
45	Worm Shaft Bearing
46	Anti Reverse Actuator
47	Anti Reverse Actuator Spring
48	Anti Reverse Lever
49	Lever Screw
50	Main Shaft Bearing
51	Face Gear
52	Main Shaft Washer
53	Main Shaft Bearing
54	Aquos 4000 Side Plate
55	Side Plate Screws
56	Handle Cap Washer
57	Handle Cap
58	Follower Plate Screw
59	Follower Plate
60	Follower Bearing
61	Oscillation Block
62	Oscillation Shaft Screw
63	Follower
64	Shaft Support Plate
65	Guide Shaft Cover Plate
66	Cover Plate Screw
67	Rear Cover
68	Rear Cover Screw
69	Guide Shaft
70	Aquos 4000 Body
71	Hidden Side Plate Screw
72	Side Plate Screw Cap
73	Rotor Brake
74	Rotor Brake Screws
75	Aquos 4000 Handle
76	Right Matrix Lozenge
77	Left Matrix Lozenge

No	Parts Name
40	Worm Shaft Washer
41	Worm Shaft Bearing
42	Worm Shaft Bushing
43	Worm Shaft Gear
44	Worm Shaft
45	Worm Shaft Bearing
46	Anti Reverse Actuator
47	Anti Reverse Actuator Spring
48	Anti Reverse Lever
49	Lever Screw
50	Main Shaft Bearing
51	Face Gear
52	Main Shaft Washer
53	Main Shaft Bearing
54	Aquos 4000 Side Plate
55	Side Plate Screws
56	Handle Cap Washer
57	Handle Cap
58	Follower Plate Screw
59	Follower Plate
60	Follower Bearing
61	Oscillation Block
62	Oscillation Shaft Screw
63	Follower
64	Shaft Support Plate
65	Guide Shaft Cover Plate
66	Cover Plate Screw
67	Rear Cover
68	Rear Cover Screw
69	Guide Shaft
70	Aquos 4000 Body
71	Hidden Side Plate Screw
72	Side Plate Screw Cap
73	Rotor Brake
74	Rotor Brake Screws
75	Aquos 4000 Handle
76	Right Matrix Lozenge
77	Left Matrix Lozenge

AQUOS
4000